

UHF-R1

QUICK START

WIRING GUIDE



Power Options:

The DOLUHF-R1 comes with a 24vdc - 2.5 Amp power supply.

If the job site doesn't accomodate this power supply, please follow the instructions below.


DC POWER ONLY

External Power Supply Minimum Requirements

- 24VDC - 2.5 amp - minimum
- 12VDC - 5 amp - minimum

Using too low of amprage will not allow the reader to function properly.

Using Included Power Supply

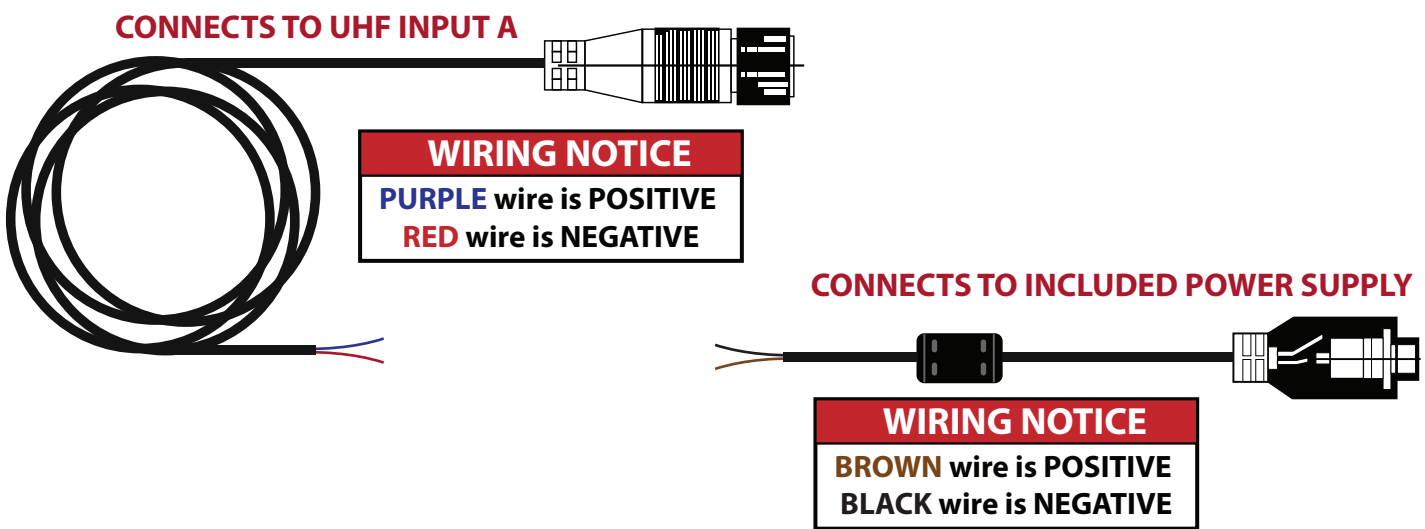

Wiegand Wiring Guide

Wiegand Ground Options:

- Black wire - 14
- Green/White wire - 11
- Grey wire - 10

Wiegand Data 0 - Red Wire - 2
Wiegand Data 1 - Red/White Wire - 1

OPTIONAL WIEGAND FILTER WIRING PROVIDED

UHF Reader & Wiegand Filter

